Coilovers install in pictures

By WIL44 (clublexus.com)

https://www.clublexus.com/forums/sc430-2nd-gen-2001-2010/560392-megan-install-in-pictures.html Couple of things to note.

- 1. Jacked front from side chassis rail and put stands at jack points. Front cross-member is too far back behind sump to operate jack from front (unless you say different). When taking off stands, lower onto block of wood so that you can remove stand and the jack again from jacking point.
- 2. Remove bolts both side of torsion bars and lower out of the way until both side are finished and put them back last.
- 3. Finished drop for me was 1.5 inches all round.
















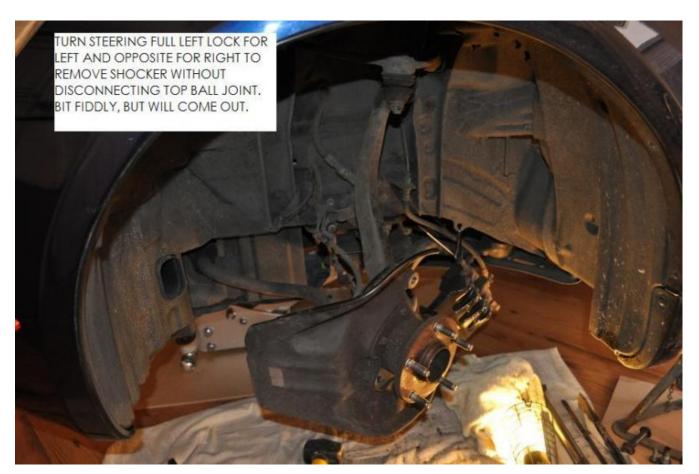












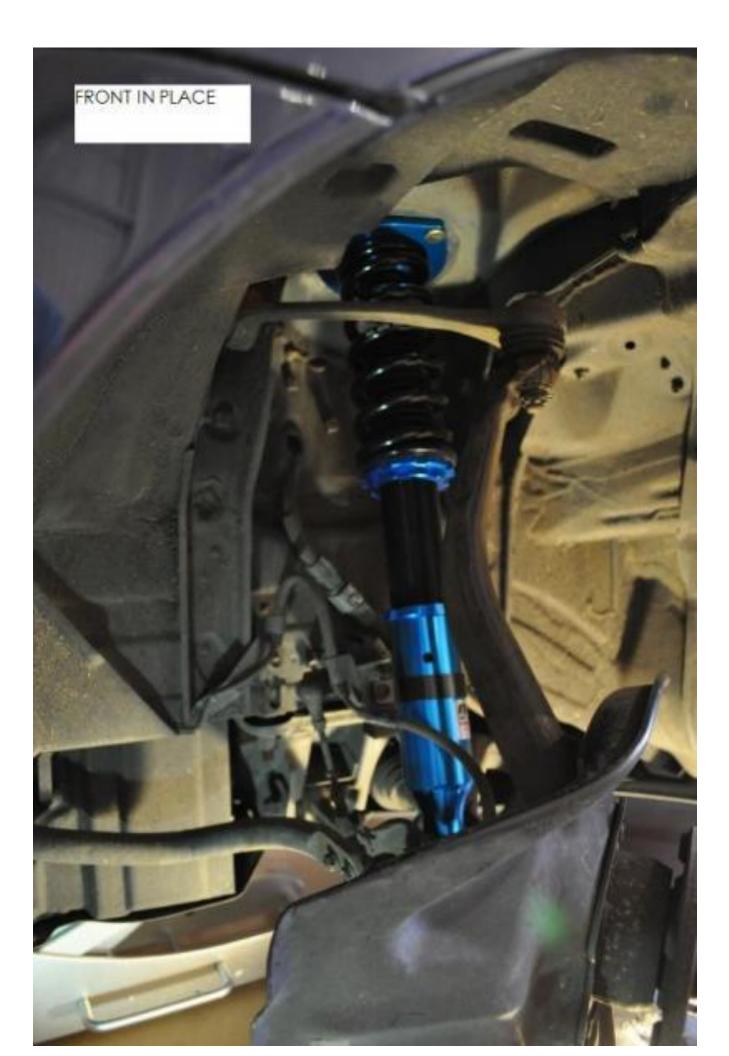













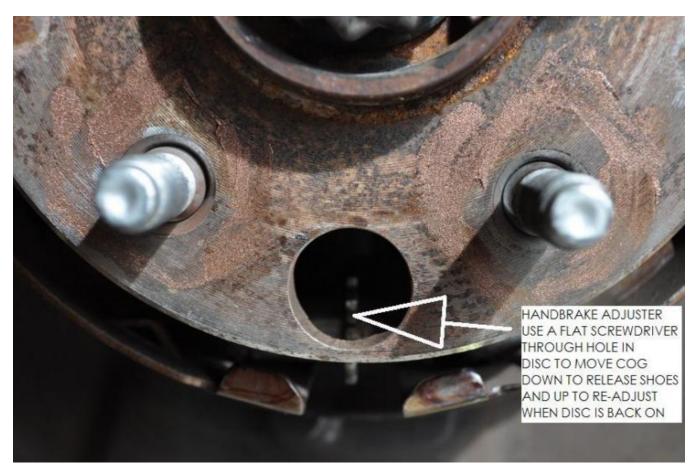


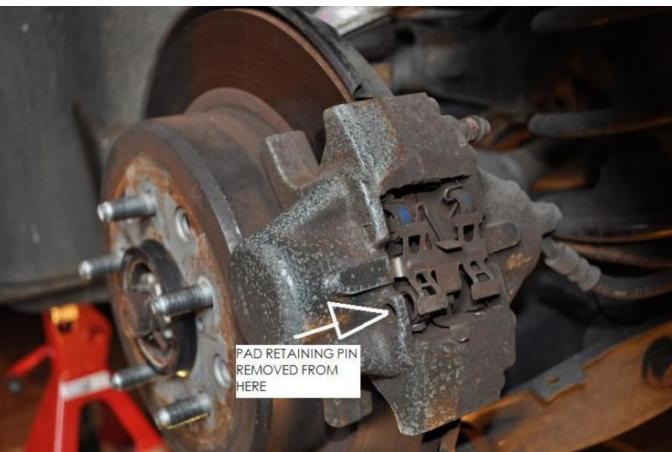


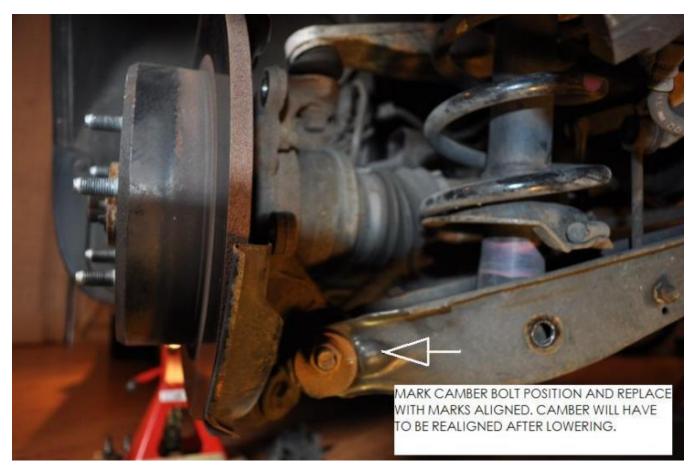

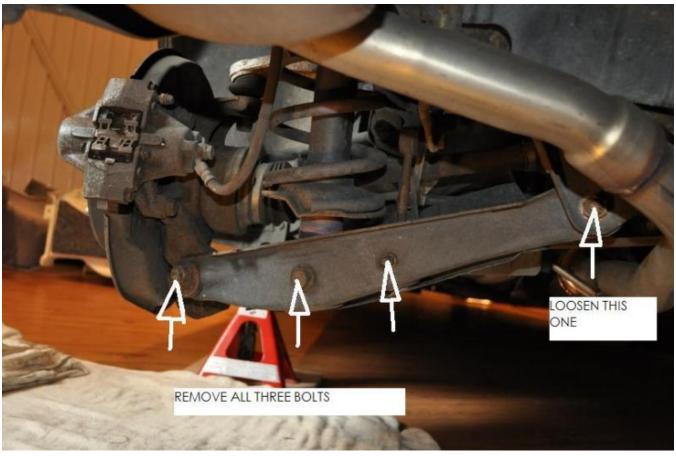




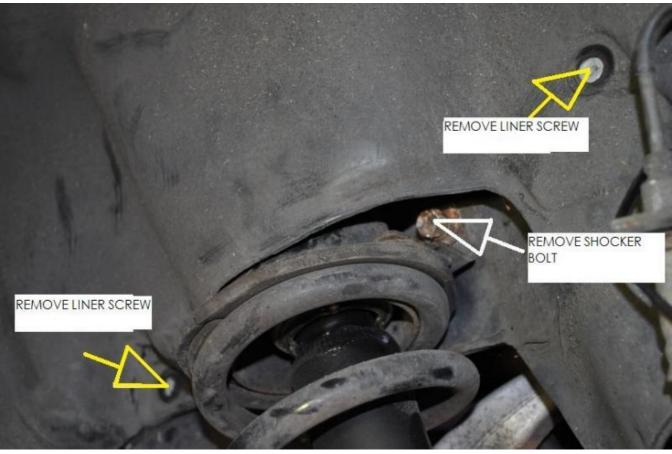

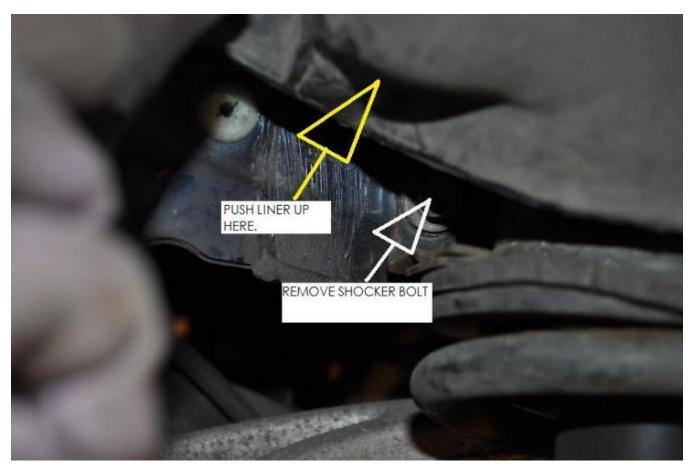





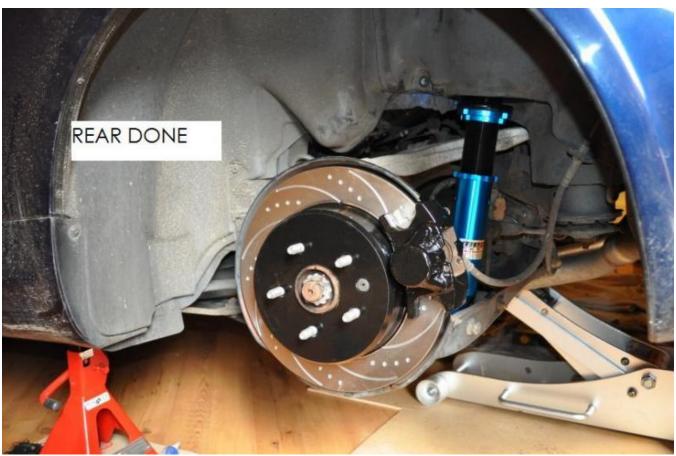













One of the decision's you have to make is how to provide access to the rear coilovers adjustments. Make sure you mark the center of the shock location from below before removing the trunk interior. I drilled a 1-1/2" diameter hole, bought a metal plug and drilled it for the adjustment knob and then painted it all grey. Here's how my turned out.



Steering and Suspension: Diagrams

Front Suspension

FRONT SUSPENSION COMPONENTS W/ RELATED COMPONENTS


SHOCK ABSORBER ASSY FRONT: **◆** 28(286,21) Front Suspension Support Assy 56(570,41) Front Coil Spring Insulator Upper Spring Support Reinforcement Front Coil Spring Support No. 1 Spring LH Upper Suspension Shock Absorber with Coil Spring Clip Speed Sensor Wire 87(890,64) Shock Absorber 5.0 (51, 44 in. lbf) Assy Front 157 (1,600, 116)

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

SHOCK ABSORBER ASSY FRONT

FRONT SUSPENSION UPPER ARM ASSY:

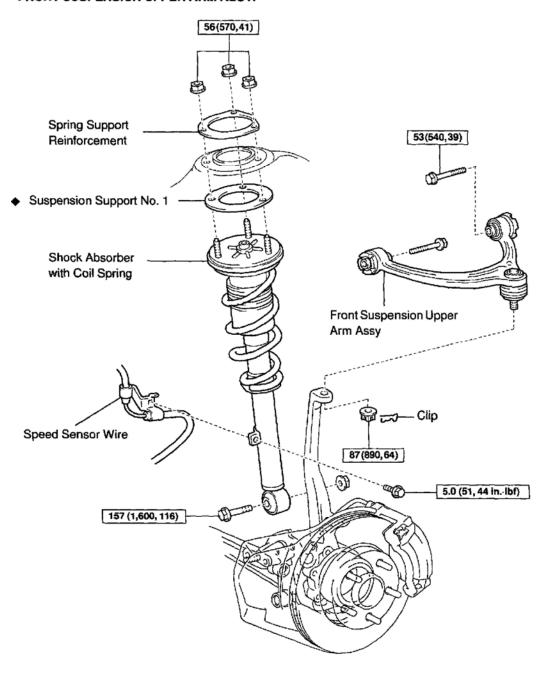


N⋅m (kgf⋅cm, ft-lbf) : Specified torque

Non-reusable part

FRONT SUSPENSION UPPER ARM ASSY

FRONT SUSPENSION LOWER ARM ASSY:

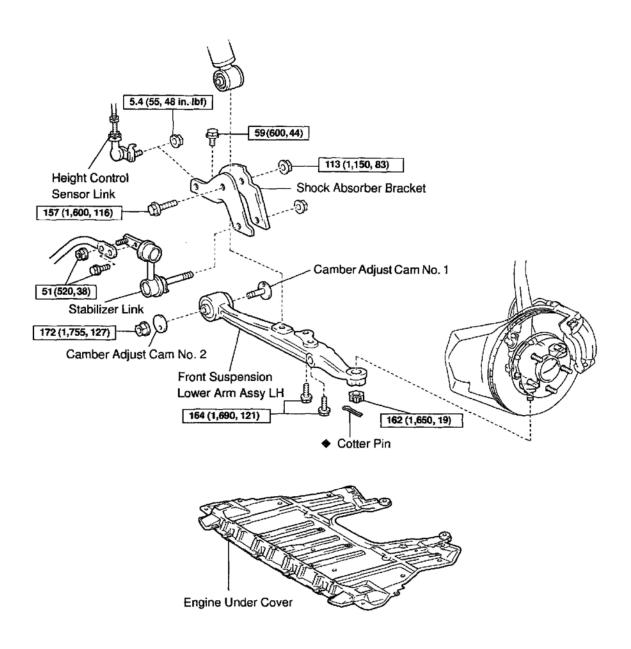


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

FRONT SUSPENSION LOWER ARM ASSY


FRONT SUSPENSION ARM SUB-ASSY LOWER NO. 2 LH:

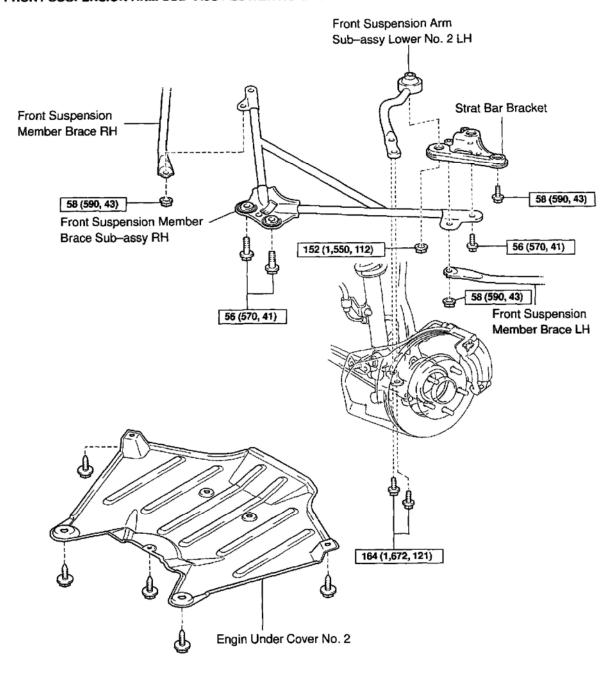

N-m (kgf-cm, ft-lbf) : Specified torque

FRONT SUSPENSION ARM SUB-ASSY LOWER NO.2 LH

LOWER BALL JOINT ASSY FRONT:

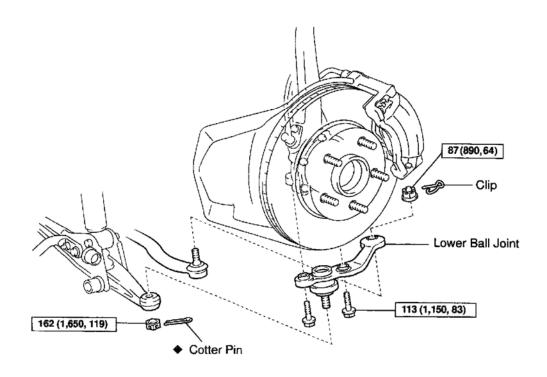


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

LOWER BALL JOINT ASSY FRONT


STABILIZER BAR FRONT:

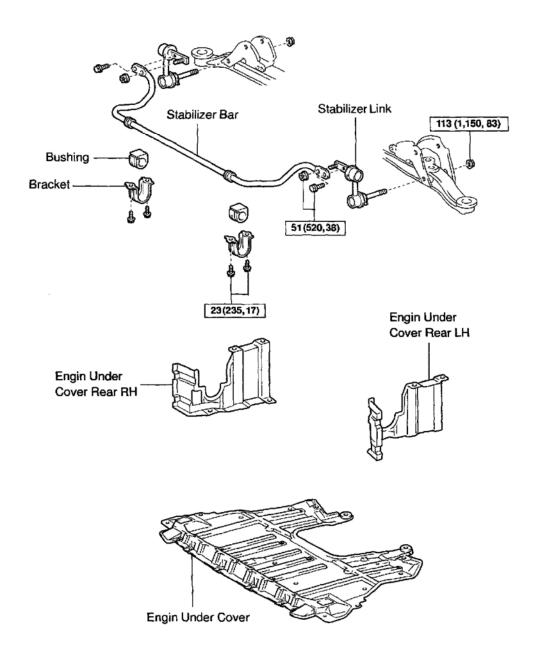

N·m (kgf·cm, ft·lbf) : Specified torque

STABILIZER BAR FRONT


SHOCK ABSORBER ASSY REAR LH:

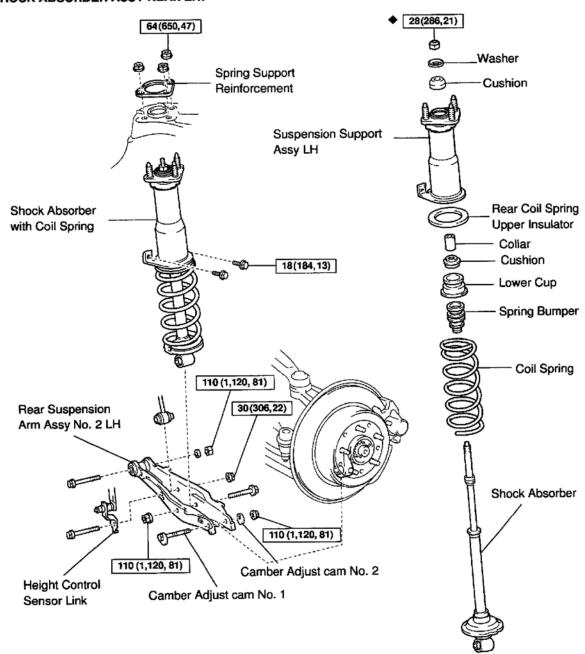

N·m (kgf·cm, ft-lbf) : Specified torque

♦ Non-reusable part

STABILIZER BAR REAR:

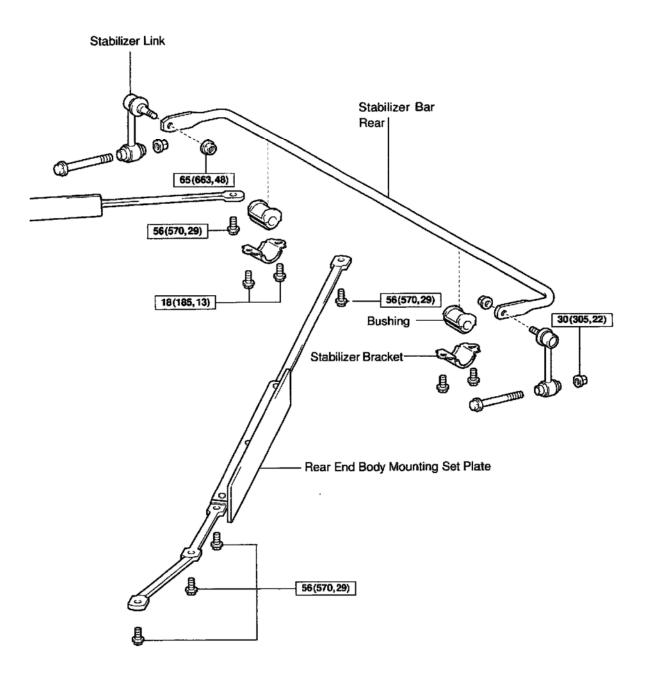

N·m (kgf·cm, ft·lbf) : Specified torque