



DISASSEMBLY

REMOVE SUSPENSION SUPPORT AND COIL SPRING

(a) Using SST, compress the coil spring.

SST 09727-30021

NOTICE:

Do not use an impact wrench. It will damage the SST.

(b) Remove the suspension support nut.

(c) Remove these parts from the shock absorber:

- Washer
- 2 cushions
- Collar
- Suspension support
- Upper insulator
- Lower cup
- Spring bumper
- Coil spring