



ADJUSTMENT

1. ADJUST REAR DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

- (a) Remove the front and rear door scuff plates.
- (b) Remove the center pillar lower garnish.
- (c) Remove the 2 bolts and front seat belt retractor.

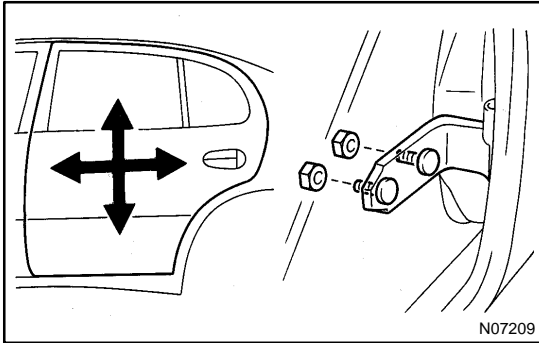

- (d) Loosen the body side nuts to adjust.
Torque: 32.5 N·m (331 kgf·cm, 24 ft·lbf)
- (e) Install the front seat retractor with the bolts.
Torque:
Upper bolt: 4.9 N·m (50 kgf·cm, 43 in.-lbf)
Lower bolt: 42 N·m (430 kgf·cm, 31 ft·lbf)
- (f) Install the center pillar lower garnish.
- (g) Install the front and rear scuff plates.

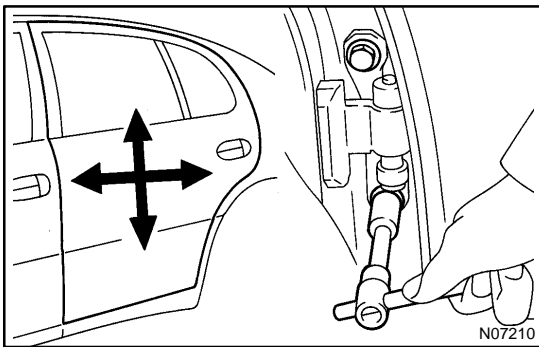

2. ADJUST REAR DOOR IN LEFT/RIGHT VERTICAL DIRECTIONS

Using a wrench, loosen the door side hinge bolts.

Torque: 32.5 N·m (331 kgf·cm, 24 ft·lbf)

3. ADJUST REAR DOOR LOCK STRIKER (See page [BO-16](#))