



REPLACEMENT

1. REMOVE FRONT WHEELS
2. REMOVE FRONT FENDER LINER LH

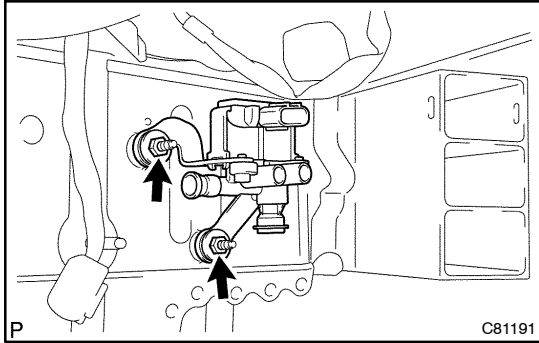

3. REMOVE HEIGHT CONTROL VALVE SUB-ASSY NO.1

- (a) Disconnect the connector.
- (b) Disconnect the under side air tube (see page 25-1).
- (c) Disconnect the 3 side air tubes (see page 25-1).
- (d) Remove the 2 nuts and height control valve sub-assy No.1.

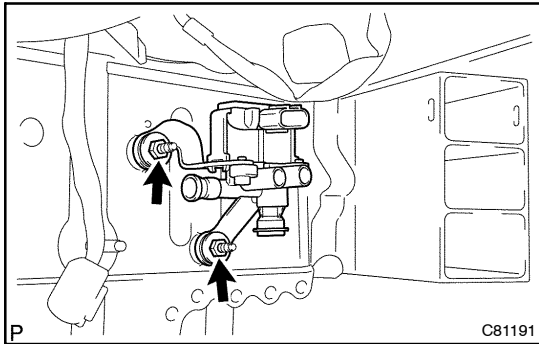

4. INSTALL HEIGHT CONTROL VALVE SUB-ASSY NO.1

- (a) Install the height control valve sub-assy No.1 with 2 nuts.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
- (b) Connect the 3 side air tubes (see page 25-1).
- (c) Connect the under side air tube (see page 25-1).
- (d) Connect the connector.

5. INSTALL FRONT FENDER LINER LH
6. INSTALL FRONT WHEELS
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
7. INSPECT AIR LEAK (SEE PAGE 25-4)