


REPLACEMENT


1. REMOVE HEIGHT CONTROL VALVE SUB-ASSY NO.2

- (a) Disconnect the connector.
- (b) Disconnect the 3 air tubes (see page 25-1).
- (c) Remove the 2 nuts and height control valve sub-assy No.2.

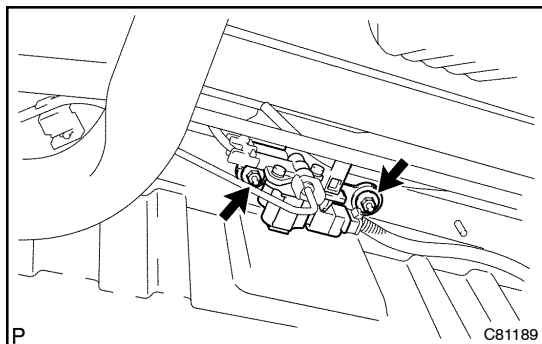

2. INSTALL HEIGHT CONTROL VALVE SUB-ASSY NO.2

- (a) Install the height control valve sub-assy No.2 with 2 nuts.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
- (b) Connect the 3 air tubes (see page 25-1).
- (c) Connect the connector.

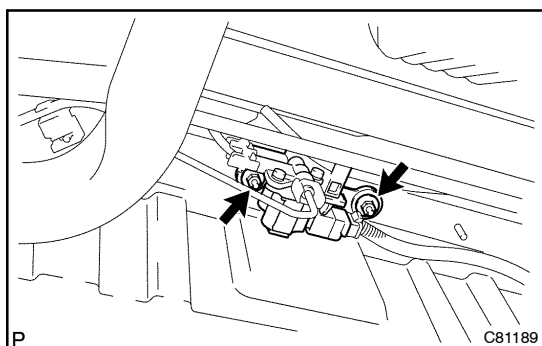

3. INSPECT AIR LEAK (SEE PAGE 25-4)