


COOL AIR BY-PASS DAMPER CONTROL SERVOMOTOR INSPECTION

AC3CT-01

1. **Driver side:**
REMOVE COOL AIR BY-PASS DAMPER CONTROL SERVOMOTOR
 - (a) Remove the No.1 under cover.
 - (b) Remove the 2 air ducts.
 - (c) Disconnect the connector.
 - (d) Disconnect the control rod.
 - (e) Remove the 3 screws and servomotor.

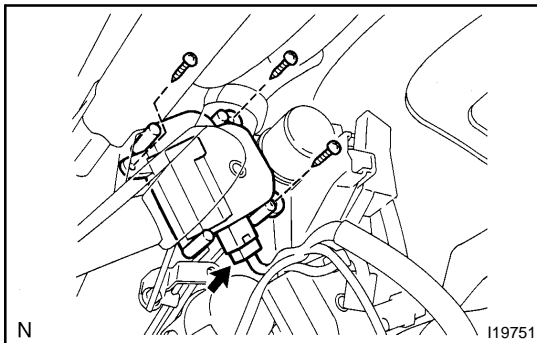

2. **Passenger side:**
REMOVE COOL AIR BY-PASS DAMPER CONTROL SERVOMOTOR
 - (a) Remove the finish panel assembly (See page [BO-128](#)).
 - (b) Remove the blower unit (See page [AC-44](#)).
 - (c) Disconnect the connector.
 - (d) Remove the 3 screws and servomotor.
3. **Driver side:**
INSPECT COOL AIR BY-PASS DAMPER CONTROL SERVOMOTOR CIRCUIT (See page [DI-1864](#))
4. **Driver side:**
INSPECT COOL AIR BY-PASS DAMPER POSITION SENSOR CIRCUIT (See page [DI-1847](#))
5. **Passenger side:**
INSPECT COOL AIR BY-PASS DAMPER CONTROL SERVOMOTOR CIRCUIT (See page [DI-1867](#))
6. **Passenger side:**
INSPECT COOL AIR BY-PASS DAMPER POSITION SENSOR CIRCUIT (See page [DI-1851](#))
7. **INSTALL AIR BYPASS DAMPER CONTROL SERVOMOTOR**