



REMOVAL

1. REMOVE FINISH PANEL ASSEMBLY
(See page [BO-128](#))

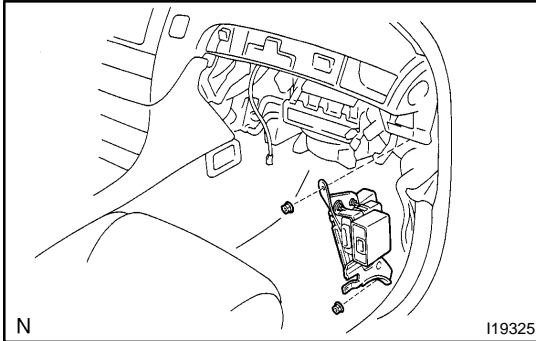

2. REMOVE AIR SUSPENSION AND HEADLIGHT BEAM LEVEL CONTROL ECU
 - (a) Disconnect the connectors.
 - (b) Remove the 2 nut and ECU assembly.

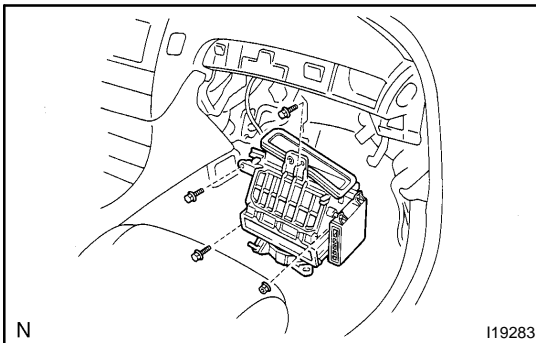

3. REMOVE BLOWER UNIT
 - (a) Disconnect the connectors.
 - (b) Remove the nut and 3 bolts.
 - (c) Remove the blower unit.