




- (n) Route the door sill wire harness along the OE wire harness toward the bottom of the vehicle and secure the fuse with two wire ties (Fig. 2-11).

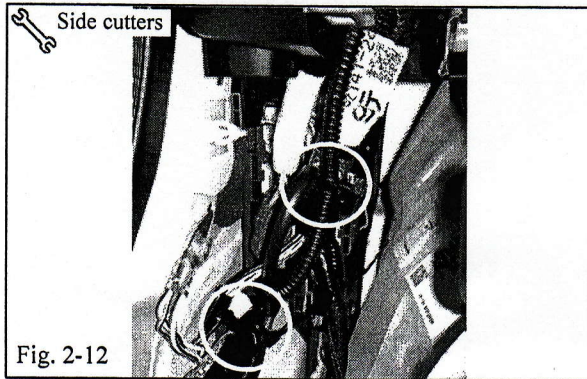

- (o) Route the door sill wire harness down along the OE wire harness and secure it with two wire ties (Fig. 2-12).

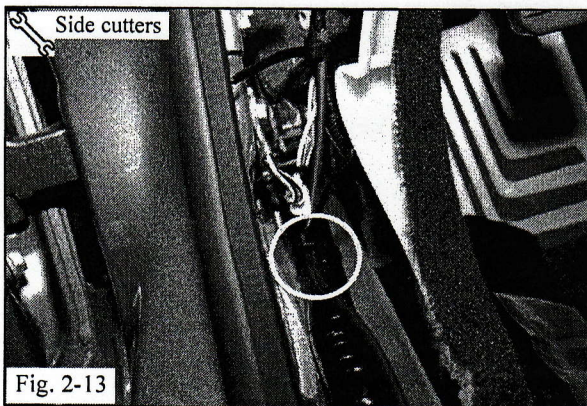

- (p) Route the door sill wire harness along the OE floor wire harness and secure it with one wire tie (Fig. 2-13).

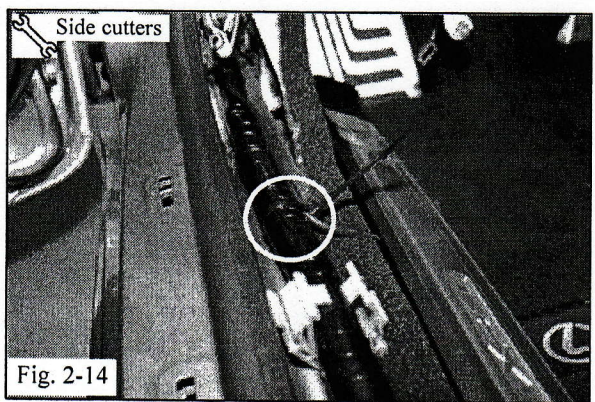


- (q) Route the door sill wire harness along the OE floor wire harness and secure it with one wire tie (Fig. 2-14).

### 3. Install the Passenger Side Door Sill.



- (a) Locate the 64 pin connector behind the passenger side kick panel (Fig. 3-1).

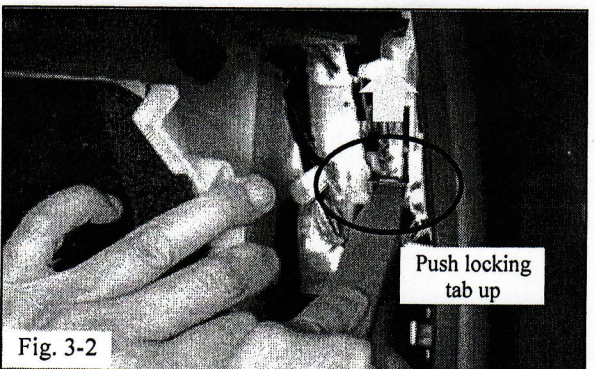

- (b) Push the locking tab up and pull the black lock mechanism out to remove the connector from the connector block (Fig. 3-2).





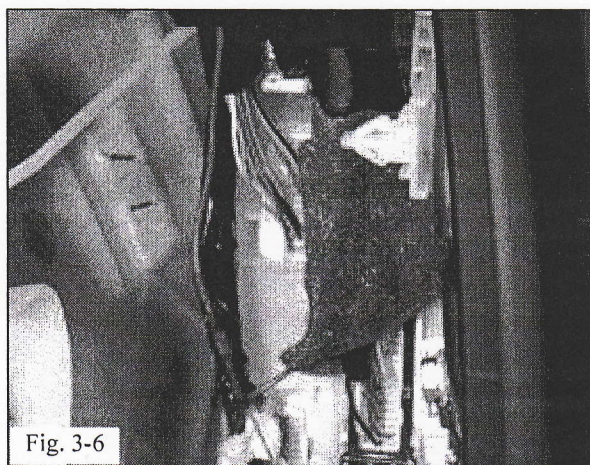


Fig. 3-6

- (i) Reattach the black lock mechanism and reconnect it to the connector block (Fig. 3-6).

**⚠ CAUTION:** Make sure the connector lock engages securely.


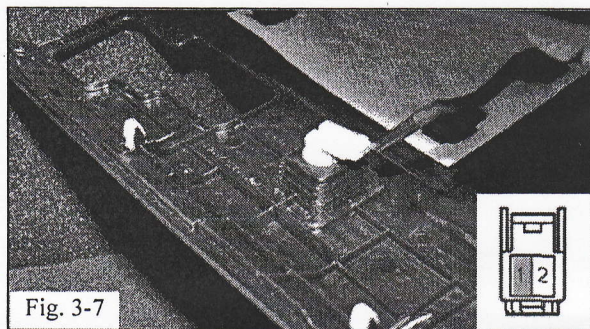


Fig. 3-7

- (j) Locate the blue wire (B[+], pin 1) on the driver side foot lamp connector (Fig. 3-7).

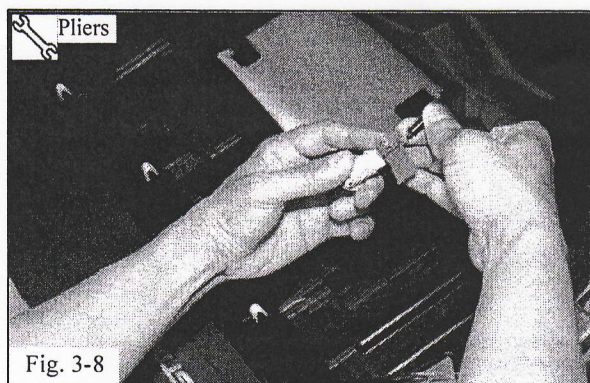

Pliers

Fig. 3-8

- (k) Connect the blue wire from the door sill to the foot lamp with a Scotchlok (Fig. 3-8).



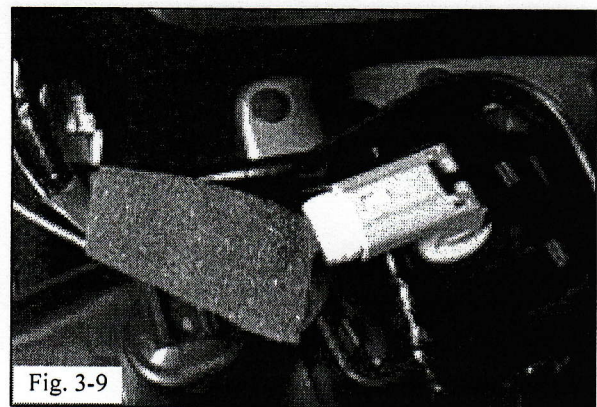


Fig. 3-9

(l) Apply foam tape over the Scotchlock (Fig. 3-9).

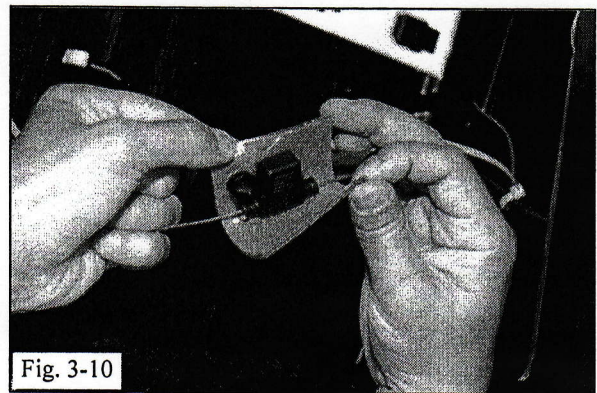


Fig. 3-10

(m) Apply foam tape over the fuse holder (Fig. 3-10).

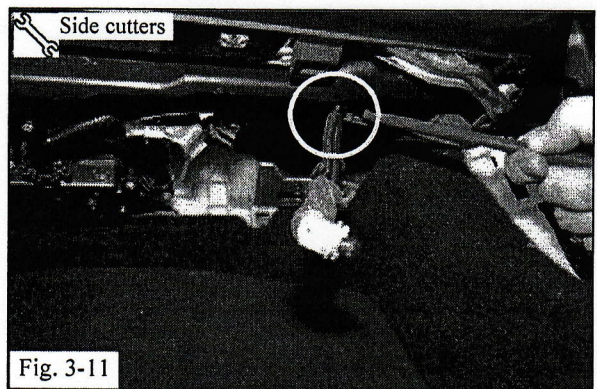


Fig. 3-11

(n) Tie the blue wire to the foot lamp wire harness with two wire ties (Fig. 3-11 and Fig. 3-12).

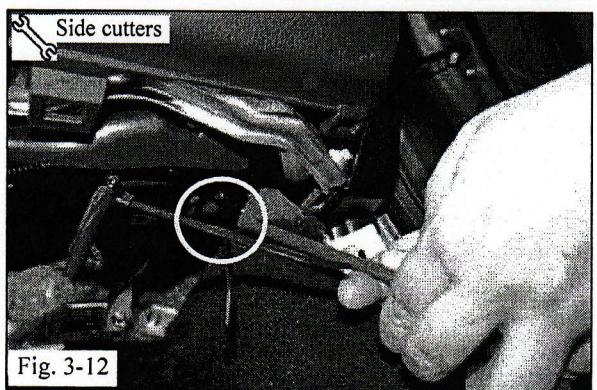


Fig. 3-12