

Technical Service Information Bulletin August 10, 2001 Title: **SHOULDER BELT ANCHOR TAPE SET** Models: All Applicable ES 300, IS 300, LX 450, LX 470 & RX 300

Introduction To assist customers in preventing particle buildup and preserve the appearance of the shoulder belt anchor, the following procedure has been developed.

Applicable Vehicles

- 1997 2001 model year ES 300 vehicles.
- 2000 2001 model year IS 300 vehicles.
- 1996 1997 model year LX 450 vehicles.
- 1998 2001 model year LX 470 vehicles.
- 1999 2001 model year RX 300 vehicles.

 Parts Information
 CURRENT PART NUMBER
 PART NAME

 73205-48011
 Tape Set, Shoulder Belt Anchor

 NOTE:
 Part Name

The above tape set contains the fluorocarbon resin tape (2 pieces) and Velcro tape (1 piece).

Warranty Information	OP CODE	DESCRIPTION	TIME	OPN	T1	T2
	BD1011	Clean the Shoulder Belt Anchor	0.3	73210–#####–##* ¹ 73220–#####–##* ¹	61	99
	* ¹ OPN should be part number of whichever belt assembly that the procedure is performed on.					

Applicable Warranty*: This repair is covered under the Lexus Comprehensive Warranty. This warranty is in effect for 48 months or 50,000 miles, whichever occurs first, from the vehicle's in-service date.

* Warranty application is limited to correction of a problem based upon a customer's specific complaint.



BODY

BO009-01

Installation 1. CLEAN SHOULDER BELT ANCHOR

Procedure


NOTE:


- Do not install the tape when the vehicle temperature is below the freezing point.
- Do not re-use removed fluorocarbon resin tape.
 - A. Pull out the seat belt about 300 mm and attach a clip as shown in the illustration.

HINT:

Preventing the seat belt from retraction with a clip will make the following work easier.

B. Put the Velcro tape (in the parts kit) through the hole of the shoulder belt anchor, brush–shaped side to the anchor.

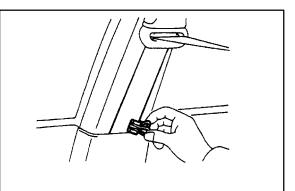


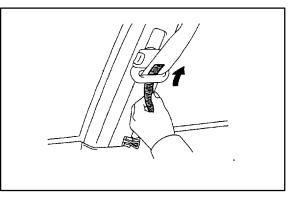

C. Pull both ends of the Velcro tape with your hand and shave off the dirt on the shoulder belt anchor by moving the Velcro tape several times as shown in the illustration.

NOTE:

Remove the dirt completely. Otherwise, the fluorocarbon resin tape may not adhere properly.

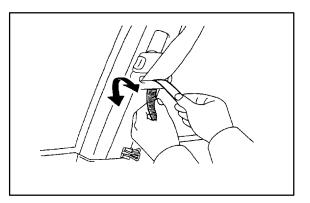

Installation 2. Procedure (Continued)


2. INSTALL FLUOROCARBON RESIN TAPE

A. Place the fluorocarbon resin tape onto the seat belt as shown in the illustration.

NOTE:

Before installation of the fluorocarbon resin tape, it is necessary to pre-release the colored film about 5 mm for each side. (Not fully released.)


B. By pulling up the seat belt, put the fluorocarbon resin tape through the hole of the shoulder belt anchor. Match the shoulder belt anchor to the center of the tape.





D. Remove the lower side colored film from the fluorocarbon resin tape, and securely affix the tape to the outside of the shoulder belt anchor.

NOTE:

- Be sure to affix the fluorocarbon tape securely along all edges.
- Pay attention not to make any wrinkles or slack in the fluorocarbon resin tape.
 - E. Remove the clip.

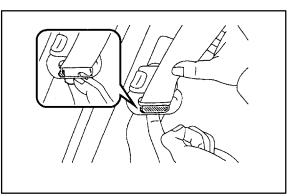

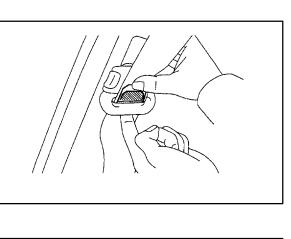

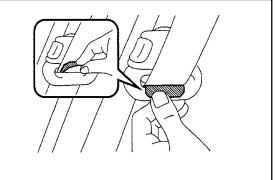

Installation Procedure (Continued) F. By pulling the seat belt up and down several times, as shown in the illustration, securely affix the fluorocarbon resin tape and confirm the smoothness of the belt movement.

NOTE:

Affix the fluorocarbon resin tape on the shoulder belt anchor to the other side following the same procedure.

NOTE:

If the seat belt requires cleaning to remove dirt, only use a neutral detergent or lukewarm water to clean. Use the seat belt after it is completely dried, to confirm proper operation.

