


- (g) Connect the wire harness connector (E) to the power steering link assembly and securely lock the connector.
- (h) Install the 2 wire harness clamps to the front of the sub frame.
- (i) Install the bolt (F) to connect the bracket to the front frame.

Torque: 13 N·m (130 kgf·cm, 10 ft·lbf)

- (j) Install engine under cover.

3. Remove Rear Sway Bar.

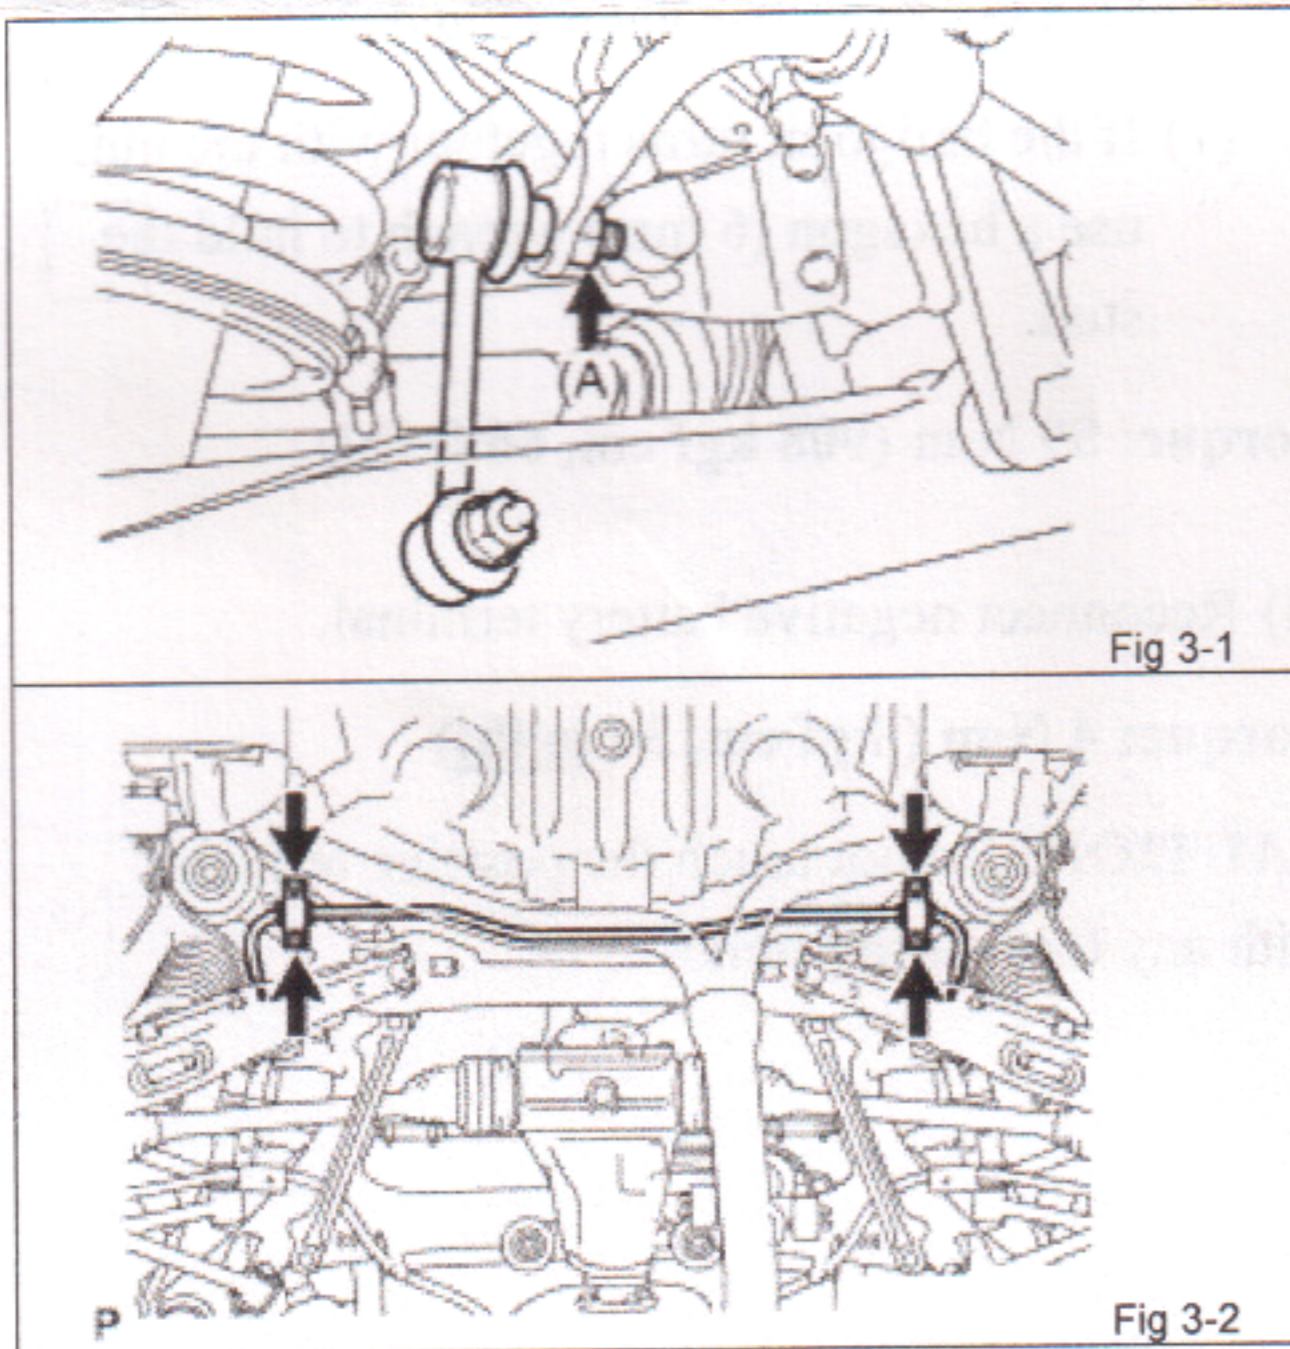

- (a) Disconnect sway bar links. (Fig 3-1)

- (b) Remove rear sway bar. (Fig 3-2)

- (1) Remove the 4 bolts and rear stabilizer bar brackets.
- (2) Discard OE rear sway bar.