

<b>Last Modified:</b> 7-13-2007		1.6 A
<b>Service Category:</b> Drivetrain	<b>Section:</b> Axle/Differential	
<b>Model Year:</b> 2008	<b>Model:</b> ES350	<b>Doc ID:</b> RM0000012L000RX
<b>Title:</b> AXLE: FRONT AXLE HUB BOLT: REPLACEMENT (2008 ES350)		


## REPLACEMENT

### 1. REMOVE FRONT WHEEL

### 2. SEPARATE FRONT DISC BRAKE CALIPER ASSEMBLY [INFO](#)

### 3. REMOVE FRONT DISC [INFO](#)

### 4. REMOVE FRONT AXLE HUB BOLT

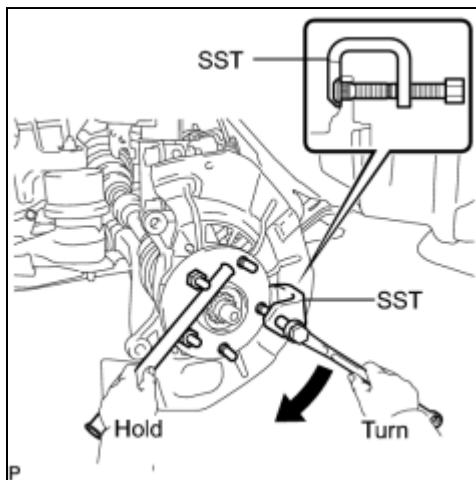


(a) Temporarily install the 2 nuts and washers to the front axle hub bolt as shown in the illustration.

(b) Using SST and a brass bar or a similar tool to hold the front axle, remove the front axle hub bolt.

**SST: 09628-10011**

### 5. INSTALL FRONT AXLE HUB BOLT

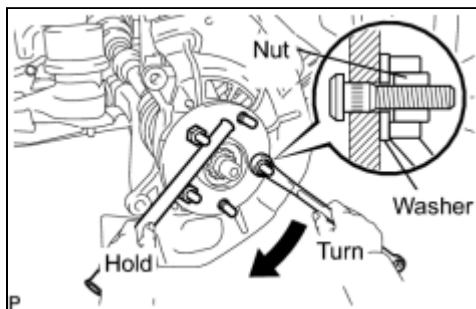

(a) Install a washer and nut to a new front axle hub bolt as shown in the illustration.

(b) Using a brass bar or a similar tool to hold the front axle, install the hub bolt by torquing the nut.

### 6. INSTALL FRONT DISC [INFO](#)

### 7. INSTALL FRONT DISC BRAKE CALIPER ASSEMBLY [INFO](#)

## 8. INSTALL FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

