


Last Modified: 7-13-2007		1.6 A
Service Category: Brake	Section: Brake (front)	
Model Year: 2008	Model: ES350	Doc ID: RM000000LBC00RX
Title: BRAKE: FRONT BRAKE: INSTALLATION (2008 ES350)		

INSTALLATION


1. INSTALL DISC BRAKE CYLINDER ASSEMBLY

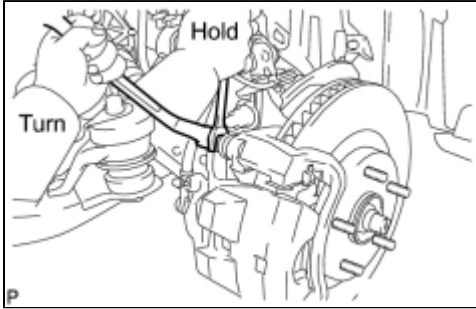

(a) Install the disc brake cylinder assembly with the 2 bolts.

Torque: 34 N·m (350 kgf·cm, 25 ft·lbf)

(b) Install a new gasket to the front brake flexible hose.

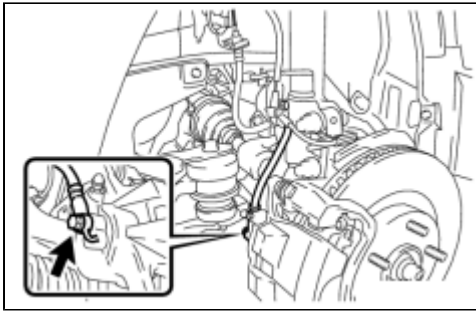

(c) Connect the front brake flexible hose with the union bolt to the disc brake cylinder assembly.

Torque: 29 N·m (300 kgf·cm, 21 ft·lbf)

NOTICE:

Install the front brake flexible hose lock securely in the lock hole in the disc brake cylinder assembly.

2. FILL RESERVOIR WITH BRAKE FLUID [INFO](#)

3. BLEED BRAKE LINE [INFO](#)

4. BLEED BRAKE ACTUATOR ASSEMBLY [INFO](#)

5. INSPECT BRAKE FLUID LEVEL IN RESERVOIR [INFO](#)

6. INSPECT FOR BRAKE FLUID LEAK

7. INSTALL FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

