


Last Modified: 7-13-2007		1.6 G
Service Category: Audio/Visual/Telematics		Section: Garage Door Opener
Model Year: 2008	Model: ES350	Doc ID: RM00000277B006X
Title: GARAGE DOOR OPENER: GARAGE DOOR OPENER SYSTEM: INSPECTION (2008 ES350)		

INSPECTION

1. INSPECT GARAGE DOOR OPENER

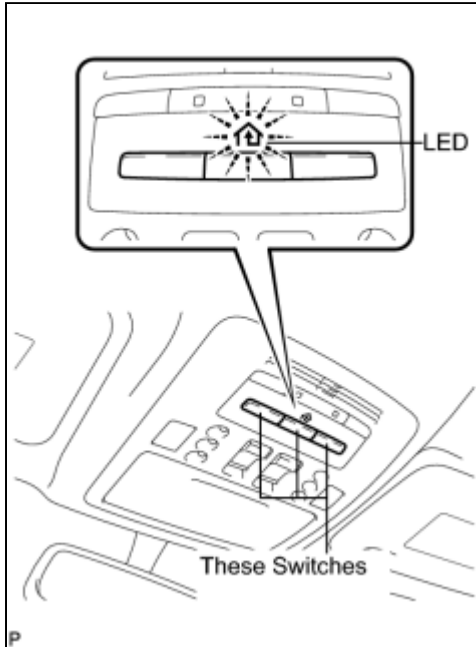


- (a) To inspect the garage door opener system, press each switch and check that the LED in the "HomeLink" logo illuminates as illustrated. If one or more of the switches do not cause the LED to illuminate, confirm that the fuse and the wiring to the garage door opener system unit is normal. If the fuse and wiring are normal, and the LED does not work, replace the garage door opener system unit located in the roof console box assembly.

2. INSPECT GARAGE DOOR OPENER REGISTRATION AND TRANSMITTING OPERATION

HINT:

Use the KENT-MOORE "HomeLink" tester, and the KENT-MOORE handheld transmitter for this test. First erase the customer's transmitter codes, and then register the tester's handheld transmitter code to the garage door opener system.

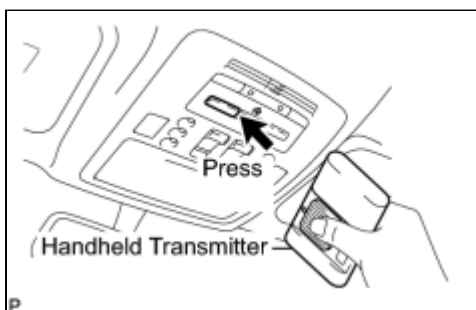

- (a) Check if the tester's handheld transmitter code was successfully registered.

HINT:


If the handheld transmitter's code cannot be registered, replace the garage door opener system unit.

- (b) Press the garage door opener switch that was used to copy the signal

from the handheld transmitter. Check if the "HomeLink" tester's green LED illuminates.

HINT:

If the green LED does not illuminate, replace the garage door opener system unit that is located in the roof console box assembly.

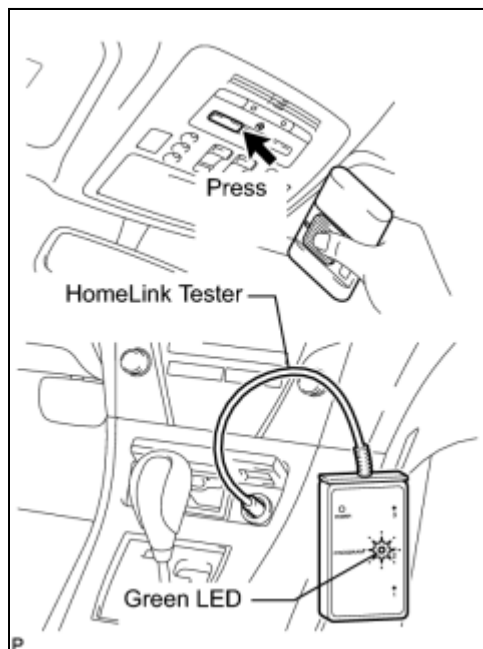

(c) When the inspection is complete, re-register the customer's handheld transmitter codes.

