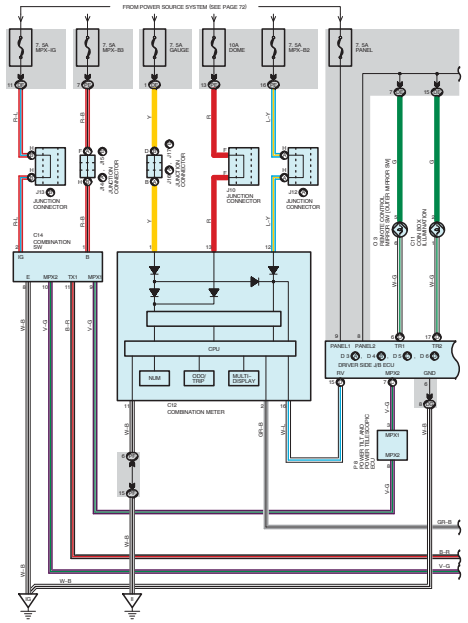
FROM POWER SOURCE SYSTEM (SEE PAGE 72)
7.5A MPX-IG
7.5A MPX-BS
10A DOME
7.5A MPX-BS2
7.5A PANEL
J10 JUNCTION CONNECTOR
J11 JUNCTION CONNECTOR
J12 JUNCTION CONNECTOR
J13 JUNCTION CONNECTOR
J14 JUNCTION CONNECTOR
C14 COMBINATION SW
C13 REMOTE CONTROL MIRROR SW
C11 ILLUMINATION
CPU
SPEED
TACH
FUEL
WTEMP
ODO TRIP
MULTI-DISPLAY
C12 COMBINATION METER
D3 D4 D5 D6
DRIVER SIDE J/B ECU
GND
P.W.R. TILT AND POWER SLIDE MOTOR
P.W.R. TILT AND POWER SLIDE MOTOR W/ ILLUMINATION
GR-B
W-B
B-R
V-G

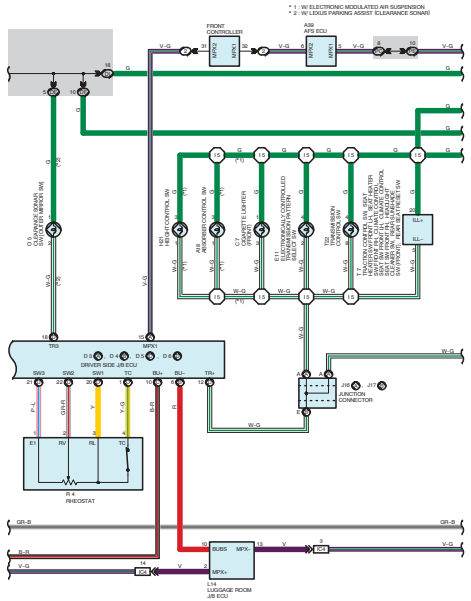
* 1 : W/ ELECTRONIC MODULATED AIR SUSPENSION
* 2 : W/ LEXUS PARKING ASSIST (CLEARANCE SONAR)
FRONT CONTROLLER
A39 APS ECU
MPX1
MPX2
O 5 SHAKE SENSOR SYSTEM (FR WIPER SW)
H31 HEADLIGHT CONTROL SW
A16 INTERMITTENT CONTROL SW
C7 CIGARETTE LIGHTER (FRONT)
T20 TRANSMISSION CONTROL SW
ELECTRONICALLY CONTROLLED TRANSMISSION CONTROL SWITCH ASSY
TRACTION CONTROL SW
SHIFT POSITION ILLUMINATION
SHIFT LOCK CONTROL
ELECTRONICALLY CONTROLLED BRAKE SYSTEM
SLIP INDICATOR
SNOW MODE SW
CRUISE CONTROL SW
SLOPE SW
TR2
TR3
MPX1
MPX2
DRIVER SIDE J/B ECU
J15 J17 JUNCTION CONNECTOR
R 4 RHEOSTAT
BUBS
MPX+
L14 LUGGAGE ROOM J/B ECU
GR-B
B-R
V-G
W-G

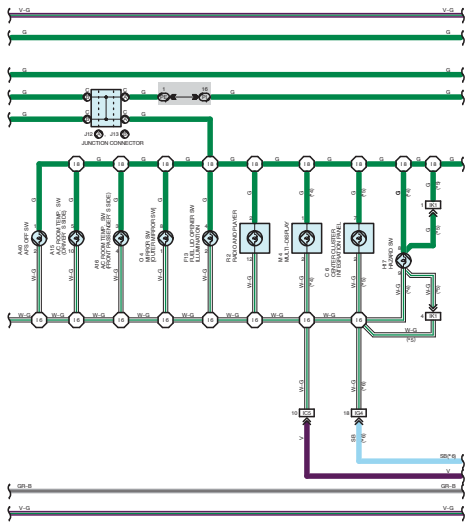
J10 JUNCTION CONNECTOR
A40 APS UNIT SW
A41 ROOM TEMP. SW (FRONT SENSOR)
A42 ROOM TEMP. SW (REAR SENSOR)
O 4 MIRROR SW
P13 ILLUMINATION SW
P12 PASSENGER DOOR SW
M 4 MIRROR SW
C 6 OPERATION LIGHTS (DRIVER'S SEAT)
M 7 MIRROR SW
J22 JUNCTION CONNECTOR
SBP-6
GR-B
V-G
W-G
W-B

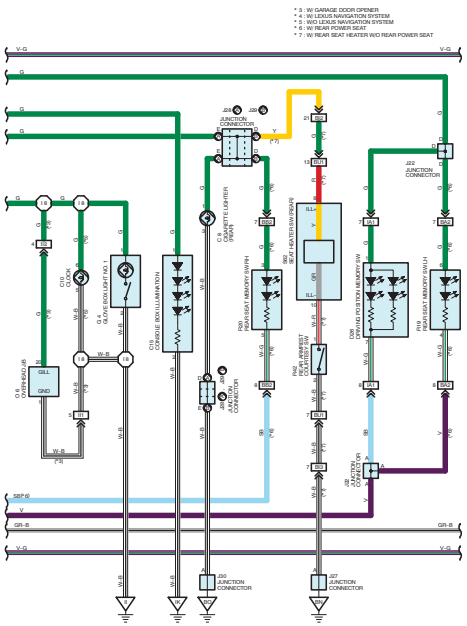
* 3 : W/ GARAGE DOOR OPENER
* 4 : W/ LEXUS NAVIGATION SYSTEM
* 5 : W/O LEXUS NAVIGATION SYSTEM
* 6 : W/ REAR POWER SEAT
* 7 : W/ REAR SEAT HEATER W/O REAR POWER SEAT
J20 J28 JUNCTION CONNECTOR
J22 JUNCTION CONNECTOR
C 8 CIGARETTE LIGHTER (REAR)
C10 CLOCK
C 4 GLOVE BOX LIGHT (NO.1)
C 5 GLOVE BOX LIGHT (NO.2)
C16 CONSOLE BOX LIGHT
C15 CONSOLE BOX ILLUMINATION
C18 CONSOLE BOX ILLUMINATION
F50 FRONT DOOR LOCK ASSY (RH)
F49 FRONT DOOR LOCK ASSY (LH)
F48 DOOR ASSIST GRIP LIGHT
D26 DOOR COURTESY SW (RH)
D28 DOOR COURTESY SW (LH)
R19 FRONT DOOR LOCK ASSY (RH)
R18 FRONT DOOR LOCK ASSY (LH)
J8 JUNCTION CONNECTOR
J30 JUNCTION CONNECTOR
J27 JUNCTION CONNECTOR
SBP-6
GR-B
V-G
W-B

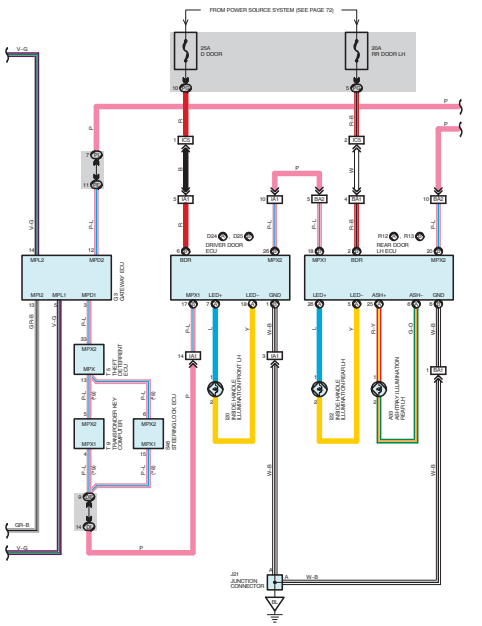
FROM POWER SOURCE SYSTEM (SEE PAGE 72)
25A D DOOR
20A RR DOOR LH
DRIVER DOOR ECU
REAR DOOR LH ECU
CERTIFICATION ECU
J21 JUNCTION CONNECTOR
W-B
GR-B
V-G

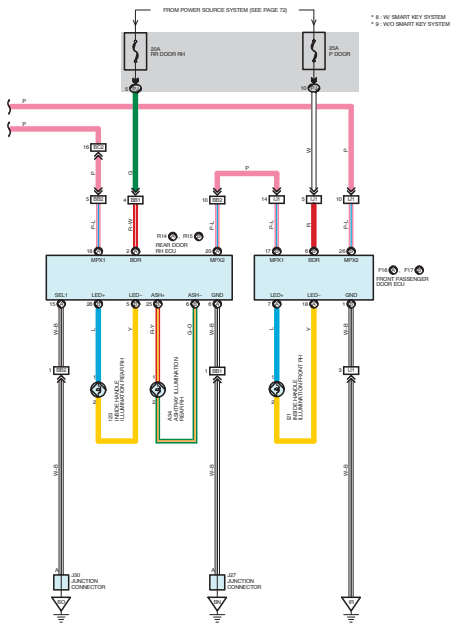
* 8 : W/ SMART KEY SYSTEM
* 9 : W/O SMART KEY SYSTEM
FROM POWER SOURCE SYSTEM (SEE PAGE 72)
30A RR DOOR RH
20A P DOOR
REAR DOOR RH ECU
FRONT PASSENGER DOOR ECU
J30 JUNCTION CONNECTOR
J27 JUNCTION CONNECTOR
W-B